

# Cummins Onan



## Residential Generator Accessories

### Remote Display 0300-657

Additional user interface and display for RS air-cooled generators allow you to monitor your generator's performance from a second location. Provides maintenance reminders (oil change, filter change, etc) and ability to easily understand generator status. Surface mountable design for easy installation. Requires Cummins Onan remote display installation harness and mounting hardware.

Compatibility: RS12000 (12GSAA), RS13AC, RS14AF, RS20A, RS20AC



### Remote Display Installation Harnesses


- A029U306 1 ft + 1 ft pigtail
- A029U308 50 ft + 1 ft pigtail
- A029U310 100 ft + 1 ft pigtail
- A029U311 200 ft + 1 ft pigtail

Easy plug-n-play connection from remote display to RS air-cooled generators. 1, 50, 100 and 200 ft harness plugs into generator and is trimmed to length at display. 1 ft pigtail plugs into the harness. Color coded for easy installation.

The 1 ft harness allows display of your wires to the pig tail. Compatibility: RS13A, RS13AC, RS14AF, RS20A, RS20AC



1, 50, 100, 200 ft harness

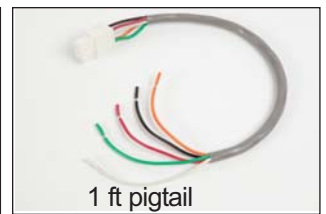

1 ft pigtail

### Generator to ATS Installation Harnesses

- A029U298 1 ft
- A029U302 50 ft
- A029U303 100 ft
- A029U304 200 ft

Easy plug-n-play harness connects low voltage wiring between generator and transfer switch. Harness plugs into generator and is trimmed to length at the transfer switch. Color coded wires are connected color-number to RSS terminal block. Includes harness with water tight Deutch plug and label with color-numbered wiring instructions.

Compatibility: RS13A, RS13AC, RS14AF, RS20A or RS20AC generators and the RSS transfer switch models.



1, 50, 100, 200 ft harness

**Alternator Dryer Kit A029J885**

30W, 120V flexible heater mounts to the genset alternator. Prevents condensation and frost from forming on the alternator. Designed to eliminate corrosion. Adhesive backed heater pad attaches directly to generator alternator. Requires external power source connected to heater. Includes flexible heater pad (250mm X 50 mm), two spade terminals, two cable ties, convoluted sleeving, and instruction sheet A029F980.

Compatibility: RS12000 (12GSAA), RS13A, RS13AC, RS20A, RS20AC



**Battery Blanket Kit 0333-0770**

50W, 120V thermostatically controlled (65°F on, 80°F off) flexible heater wraps around the genset battery and warms it for improved cold weather starting performance. Requires external power source connected to heater. Includes heater pad with built-in thermostat, two cable ties, and instruction sheet 000G-0744.

Compatibility: RS12000, RS13A, RS13AC, RS20A, RS20AC



**Cold Weather Starting Kit 0333-0771**

88W, 120V thermostatically controlled (40°F on, 60°F off) oil and fuel system heater kit. Warms engine oil and fuel system for reliable cold weather engine starting performance to -20°F. Requires external power source connected to heater. Includes harness with engine oil heater (50W), fuel system heater (38W) and built-in thermostat and instruction sheet 006-0742.

Compatibility: RS12000 (12GSAA)



**Cold Weather Starting Kit A030S860**

80W, 120V thermostatically controlled (40°F on, 60°F off) engine oil heater and alternator dryer kit. Warms engine oil and prevents alternator condensation/frost for reliable cold weather starting performance to 0°F. Requires external power source connected to heater. Includes harness with engine oil heater (50W), alternator dryer (30W) and built-in thermostat and instruction sheet.

Compatibility: RS20A, RS20AC



**Cold Weather Starting Kit A030B021 (not shown)**

Same as above with the following differences: 118W, starting performance to -20°F, and includes fuel system heater (38W).

Compatibility: RS13A, RS13AC

**Installation Wheel Kit 0541-1624**

Installation wheel kit for easy one-person transport during installation. Initial assembly of kit required. Includes rear wheel assembly (two flat-free tires), two extender bars, assembly front wheel dolly (two flat-free tires), and instruction sheet A026D500.

Compatibility: RS12000 (12GSAA), RS13A, RS13AC, RS14AF, RS20A, RS20AC



**LP Conversion Kit A030M445**

Required to convert 2010 model year generators (RS12000, RS13A RS13AC) for use with LP fuel. Kit includes LP fuel conversion orifice, EPA certified LP engine and genset nameplate, air index tag and instruction sheet.

Compatibility: RS12000 (12GSAA-67607C), RS13A, RS13AC



**Breather Heater Kit A030W752**

25 watt, 120 volt heater for the engine breather tube to prevent ice build-up. Heater connects via plug into cold weather starting kit (P/N A030S860) accessory or cold weather equipped model.

Compatibility: RS20A, RS20AC

