

AIR CLEANER COVER

MAINTENANCE ACCESS COVER

CIRCUIT BREAKERS

BATTERY CABLE & REMOTE CONTROL WIRING ENTRANCE

AC OUTPUT

MUFFLER (INSIDE HOUSING)

CONNECTIONS FOR:
FUEL FILTER
FUEL INLET
B- CONNECTION
(Bottom side)

CONTROL SWITCH & STATUS INDICATOR LIGHT

B+ CONNECTION

OIL FILL CAP & DIPSTICK

OIL FILTER (ACCESS BELOW)

OIL DRAIN VALVE (EXIT BELOW)

ALTITUDE ADJUST KNOB—GASOLINE, HGJAB

